



Watson-Marlow Pumps Group


A Spirax-Sarco Engineering Company



- Cut chemical cost through higher accuracy metering
- Simple drop-in installation eliminates ancillary equipment
- Reduced maintenance with single, no-tools, component replacement
- Range expanded to include Qdos 60. Flow rates from 0.1 to 1,000 ml/min (0.001 to 15 USGPH) at 7 bar (100psi)

Total cost of ownership is less than a diaphragm pump

Typical installation comparing a diaphragm metering pump with the Qdos peristaltic metering pump *Not required for Qdos system

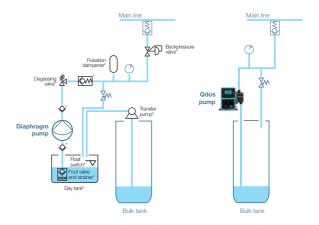

Diaphragm metering pumps require high maintenance ancillaries to function. The Qdos range eliminates this equipment while maintaining accurate, linear and repeatable metering for all process conditions.

- No backpressure valves
- No pulsation dampener
- No degassing valves
- No foot valves and strainers
- No float switches



Revolutiona technology

The unique design of the

Revolutionary pumphead technology

patented ReNu[™] pumphead enables accurate and repeatable flow for fluids of wide ranging viscosities. **No-tools maintenance** means quick, safe and easy pumphead replacement with no specialist training or maintenance technicians.

The contained pumphead design with integral leak detection reduces wastage and eliminates operator exposure to chemicals.









Flocculation

Flocculants can cause clogging in diaphragm pumps, increasing maintenance and process down-time.

Environmental conditions such as temperature affect fluid viscosity also affect diaphragm pump performance.

Odos peristaltic metering pumps deliver accurate metering even with fluctuating viscosity. The powerful suction capability eliminates the need for a day tank or specialist piping schemes. There are no seals or valves in the flow path to clog or wear, meaning pump performance is never compromised.



Disinfection

Sodium hypochlorite creates gas locking and crystallisation in diaphragm pumps.

Flow rates and pressure changes fluctuate impacting metering accuracy. Diaphragm pumps are often set to "over-dose" to ensure water quality is maintained. This increases chemical usage and secondary treatment to compensate.

Odos peristaltic metering pumps deliver predictable, accurate metering at variable pressure up to 7 bar (100 psi), even with fluctuating process conditions. Gas locking and crystallisation issues are eliminated.



Qdos peristaltic metering pumps deliver linear and accurate metering across the flow range, improving efficiency of flotation cells and leading to increased

mineral yields. The toxicity of reagents such as sulphuric acid and

The toxicity of reagents such as supplinite acid and cyanides are hazardous and can damage pumps. ReNu pumphead technology ensures the safe containment. Rapid no-tools maintenance means an





pH adjustment - Industrial water treatment

Water pH influences the effectiveness of

Accurate pH control is critical to meet water Accurate pH control is critical to meet water standards and ensure process continuity. Metering alkalis such as Calcium Hydroxide creates issues with clogging and damage. Metering acids carries safety implications and can corrode pipework and equipment.

Qdos peristaltic metering pumps minimise pH 'overshoot'. Suspended solids are handled with no risk of clogging. Operator safety is ensured with the ReNu pumphead, a single safely-contained component for rapid no-tools maintenance.



Features of the Qdos range

Simplicity in installation, operation and maintenance were key considerations when designing the Qdos range of pumps.

An intuitive menu offers advanced control features including:

- Fluid level monitoring
- Line priming
- Flow calibration

The 3.5" TFT colour display provides instant pump status, and can be configured to display in 7 different languages.

Odos pumps can be ordered with the ReNu pumphead mounted on the left or right of the pump.
The keypad, display and input/output connections are readily accessible for easy operation and maintenance. All models are IP66 rated for use in washdown environments.

Qdos 30 and Qdos 60 pump range overview







Universal+	Universal	Manual
Flexibility for automatic and manual control together with configurable 4-20mA input	Automatic and manual control	Manual speed control





Remote	PROFIBUS
Remote control for absolute process security	Manual and PROFIBUS control











Features overview

Functionality	Universal +	Universal	Manual	Remote	PROFIBUS
Operational modes					
Manual	•	•	•		•
Contact	•	•			
4-20mA	•	•		•	
Fluid recovery	•	•	•	•	•
Fault reporting	•	•	•	•	•
PROFIBUS control and diagnostics					•
Manual control					
Numerical flow display	•	•	•		•
Numerical speed display	•	•	•		•
Numerical percentage of	•	•	•		•
max speed display					
Fluid level monitor	•	•	•		•
Max (prime)	•	•	•		•
Auto restart	•	•	•		•
Pumphead failure alarm	•	•	•		•
Remote control					
4-20mA input	•	•		•	
4-20mA input two point calibration	•				
4-20mA output	•			•	
Contact input (pulse/batch)	•	•			
Run stop input	•	•		•	
Run status output	•	•		•	
Alarm output	•	•		•	
Remote fluid recovery	•	•		•	
Optional 24V or 110V industrial logic*	•	•			
LED status icons					
Pump status				•	
4-20mA status				•	
Fault				•	
Security					
Keypad lock	•	•	•		•
PIN lock	•	•	•		•

Control options - Universal and Universal+ models*

Variant	Standard pump (L)	
Input	5-24V DC	
Output	Open collector	
Variant	Relay module (H)	
Input	110V AC	
Output	Contact rating 110V AC, 5A 30V DC, 5A	
Variant	Relay module (R)	
Input	5-24V DC	
Output	Contact rating 110V AC, 5A 30V DC, 5A	








Performance data

Model	C()	Flow (ml/min)		
Model	Speed (rpm)	Qdos 30	Qdos 60	
Universal+, Universal, Manual, PROFIBUS	0.025 - 125	0.1 - 500	0.1 - 1000	
Remote	0.078 - 125	0.3 - 500	0.3 - 1000	
		Flow (USGPH)		
Universal+, Universal, Manual, PROFIBUS	0.016 - 125	0.001 - 7.93	0.016 - 15.85	
Remote	0.078 - 125	0.005 - 7.93	0.005 - 15.85	

Maximum performance curves

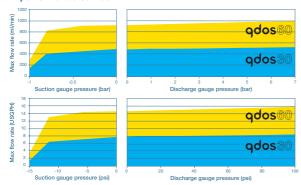

Important note - The ReNu Pumphead contains lubricant. It is the user's responsibility to comply with local health and safety regulations, notuding ensuring chemical compatibility between the lubricant and the duty fluid before use. For guidance refer to www.wmpg.com/ chemical


Dimensions



Model			С	D		F	G		
Qdos 30	234mm (9.2")	214mm (8.4")	82.5mm (3.2")	233mm (9.2")	43mm (1.7")	173mm (6.8")	40mm (1.6")	140mm (5.5")	10mm (0.4")
Qdos 60	234mm (9.2")	214mm (8.4")	118mm (4.6")	266mm (10.5")	43mm (1.7")	173mm (6.8")	40mm (1.6")	140mm (5.5")	10mm (0.4")

^{*} Optional relay module

Ordering information

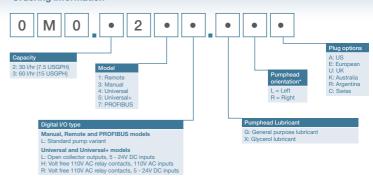

ReNu 30 pumphead	Part number	
ReNu 30 pumphead (PFPE lubricant)	0M3.2200.PFP	
ReNu 30 pumphead (silicone lubricant)	0M3.2200.SB0	
ReNu 30 pumphead (glycerol lubricant)	0M3.2200.GLY	

ReNu 60 pumphead (glycerol lubricant)	0M3.3200.GL
Accessories	Part number
Hydraulic connection pack,	0M9.221H.P01
polypropylene compression fittings	
Hydraulic connection pack,	0M9.221H.P02
polypropylene barb/threaded fittings	
Dealers and becomists	0840 00084 V00

0M9.203X.000 0M9.203Y.000 0M9.203U.000

Interface tubing	Part number
PVC 6.3x11.5mm, 2m (6.5ft) length	0M9.2222.V6B
PVC 10x16mm, 2m (6.5ft) length	0M9.2222.VAD
PVC 6.3x11.5mm, 5m (16ft) length	0M9.2225.V6B
PVC 10x16mm, 5m (16ft) length	0M9.2225.VAD
Polythene, 9x12mm, 2m, (6.5ft) length	0M9.2222.E9C
Polyethylene 5x8mm, 2m (6.5ft) length	0M9.2222.E58
Polyethylene 9x12mm, 5m (16ft) length	0M9.2225.E9C
Polyethylene 5x8mm, 5m (16ft) length	0M9.2225.E58

^{*} The pumphead side location is required when ordering. The left/right perspective assumes the user is looking at the front of the pump. The pump in the dimensions diagram on page 10 is considered a pumphead located to the left.

Weight

Model	kg	
Qdos 30	5.0	11lb 2oz
Qdos 60	5.7	12lb 9oz

[†] Pumps are 100-240 VAC, 1ph, 50-60Hz and fitted with the mains power plug for the designated plug option.



rates marion ramps are

A Spirax-Sarco Engineering Company

Watson-Marlow Pumps Group has seven world-class factories supported by direct sales operations in 25 countries and distributors in more than 50 countries. For contact details visit our website:

www.wmpg.com

Watson-Marlow

Bredel

Flexicon

MasoSine

BioPure



Watson-Marlow online

Our engineers around the world can help you choose the perfect pump and tubing for your needs.

More information? Our brochures are on our website: www.wmpg.com

For more information on Qdos peristaltic metering pumps visit: www.qdospumps.com



Watson-Marlow... Innovation in Full Flow